

NOTES:

READ WATER TABLE DEPTH:

- MEASURE DISTANCE FROM TOP EDGE OF RISER TO WATER SURFACE INSIDE OF PIPE.
 MEASURE DISTANCE FROM TOP EDGE OF RISER
- TO FINISH GRADE OF PERVIOUS PAVEMENT.
- 3. ADD A AND B FOR DEPTH TO WATER TABLE.
- 4. NOTE IF B HAS CHANGED FROM PREVIOUS OBSERVATIONS (IF SHIFTING).



STORM AND SURFACE WATER UTILITY

TITLE

OBSERVATION PORT FOR PERVIOUS PAVEMENT

NO. NDP-16

JANUARY 2011 NO SCALE